

ERROR CODES

E110 BOOM SENSOR NOT CONNECTED

- Restart the system by turning the machine off and then on again.
- If the error persists, check the cable between the boom sensor and the controlbox.

E118 TILT SENSOR NOT CONNECTED

- Restart the system by turning the machine off and then on again.
- If the error persists, check the cable between stick and tilt.

E119 BUCKET SENSOR NOT CONNECTED

- Restart the system by turning the machine off and then on again.
- If the error persists, check the cable between stick and bucket.

E120 STICK SENSOR NOT CONNECTED

- Restart the system by turning the machine off and then on again.
- If the error persists, check the cable between boom and stick.

E201 NO GPS FIX

- Check antenna cable.

E202 NO GPS FIX (FLOAT)

- The system is calculating GPS position. Wait until it changes.
- If the error persists, the GPS conditions might be bad.
- the Job-type "Without GPS" can be used instead.

E203 NO GPS FIX (SBAS)

- Check internet connection, mobile antenna, SIM card, and NTRIP subscription.

E204 NO HEADING

- Check cable between secondary controlbox and the GPS antenna.
- If the error persists, the GPS conditions might be bad, try moving the machine to another area.


OTHER ERRORS

- Restart the system by turning the machine off and then on again.
- Restart the app by pressing "change app" button on the tablet, and then pressing, "close all".

UNICONTROL

MACHINE CONTROL MADE SIMPLE

QUICK GUIDE

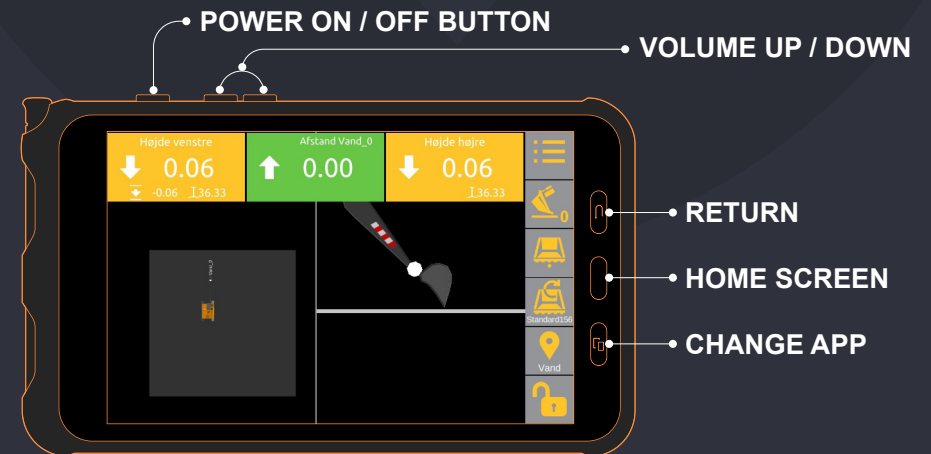

NAVIGATION

PRESS

SELECT JOBTYPE



ZERO HEIGHT



CHANGE BUCKET FOCUS



CHANGE BUCKET



PLACE POINT



LOCK TO POINT / LINE



CHANGE VIEW



ZOOM



MOVE



CHOOSE

HOLD

PROJECT

HEIGHT / SIDE OFFSET

PLACE GUIDE LINE

SELECT BUCKET


POINTCODE

DELETE POINT / LINE




3D ROTATE

JOB TYPES

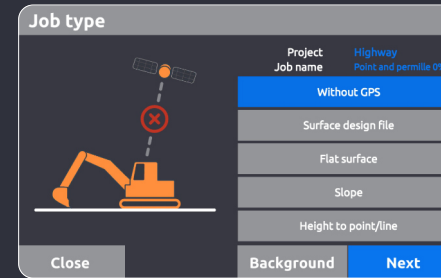


WITHOUT GPS

2D configuration.
Height must be zeroed every time the machine is moved.

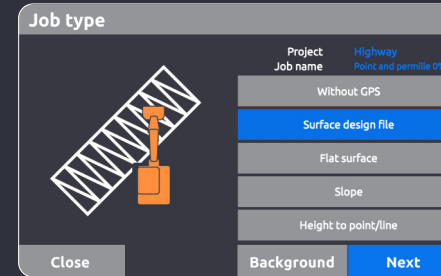


LOAD DESIGN

Height to surface,
using design files.

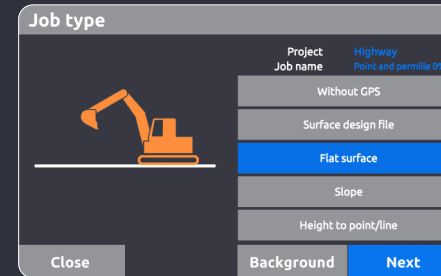


FLAT SURFACE

Set height for the entire job.

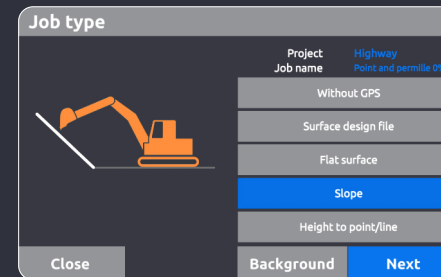

SLOPE

2 points.
Point & promille.
Slope to line.

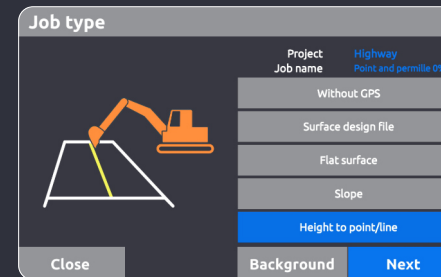

HEIGHT TO LINE

Height to 3D line using
design file, guide line,
or logged point.